

SECTION 3 ELECTRONIC CONTROL SYSTEM DIAGNOSTICS

INDEX

	PAGE
SECTION 3.1 ELECTRONIC CONTROL SYSTEM DIAGNOSTIC FORM	
INTRODUCTION	1
GENERAL INSTRUCTIONS	1
ELECTRONIC CONTROL SYSTEM DIAGNOSTIC FORM EGED-135-1 (FRONT SIDE)	2
ELECTRONIC CONTROL SYSTEM DIAGNOSTIC FORM EGED-135-1 (REAR SIDE)	4
SECTION 3.2 FLASH CODE CIRCUIT INDEX	
SECTION 3.3 SENSOR AND ACTUATOR LOCATIONS	
SENSOR AND ACTUATOR LOCATIONS (ENGINE)	1
ELECTRONIC CONTROL SYSTEM COMPONENT LOCATIONS (VEHICLE)	2
SECTION 3.4 SENSOR AND ACTUATOR DIAGNOSTIC PROCEDURES	
SENSOR AND ACTUATOR DIAGNOSTIC PROCEDURES	1
CONNECTOR CHECKS TO GROUND (B-)	1
CONNECTOR VOLTAGE CHECKS	1
HARNESS RESISTANCE TESTS	2
OPERATIONAL SIGNAL CHECKS	2
SECTION 3.5 CIRCUIT FUNCTION AND DIAGNOSTICS	
(APS/IVS) ACCELERATOR PEDAL POSITION SENSOR / IDLE VALIDATION SWITCH	2
(BARO) BAROMETRIC PRESSURE SENSOR	10
(BRAKE) BRAKE SWITCH/RELAY CIRCUITS	16
(CMP) CAMSHAFT POSITION SENSOR	30
(DCL/ATA) DCL/ATA DATA COMMUNICATION LINKS	36
(EBP) EXHAUST BACK PRESSURE SENSOR	50
(ECI) ENGINE CRANK INHIBIT	54
(ECL) ENGINE COOLANT LEVEL SYSTEM (ENGINE PROTECTION)	76
(ECM) ELECTRONIC CONTROL MODULE SELF DIAGNOSTICS	86
(ECM IDM) ECM/IDM COMMUNICATIONS	88
(ECM PWR) ELECTRONIC CONTROL MODULE POWER SUPPLY	96
(ECT) ENGINE COOLANT TEMPERATURE SENSOR	102
(EDL) ENGINE DATA LINE CIRCUITS WITH ALLISON AT/MT TRANSMISSIONS	108
(EOP) ENGINE OIL PRESSURE SENSOR	116
(EOT) ENGINE OIL TEMPERATURE SENSOR	124
(EPR) EXHAUST BACK PRESSURE REGULATOR	130
(GPC) GLOW PLUG CONTROL	134
(IAT) INTAKE AIR TEMPERATURE SENSOR	138
(ICP) INJECTION CONTROL PRESSURE SENSOR	144
(IDM PWR) INJECTOR DRIVER MODULE POWER CIRCUITS	150
(INJ) INJECTOR DRIVE CIRCUITS	158
(IPR) INJECTION PRESSURE REGULATOR	166
(KAM PWR) KEEP ALIVE MEMORY POWER	174
(MAP) MANIFOLD ABSOLUTE PRESSURE SENSOR	180
(SCCS) SPEED CONTROL COMMAND SWITCHES AND PTO CONTROLS	186
(STI/EWL) SELF TEST INPUT SWITCH AND ENGINE WARNING LIGHT	202
(TACH) TACHOMETER INPUT CIRCUITS	210
(TSA) TWO SPEED AXLE CIRCUIT	218
(V REF) VOLTAGE REFERENCE CIRCUITS	224

II SECTION 3 ELECTRONIC CONTROL SYSTEM DIAGNOSTICS

INDEX

PAGE

SECTION 3.5 CIRCUIT FUNCTION AND DIAGNOSTICS (Continued)

(VPM) VEHICLE PERSONALITY MODULE FUEL/HOUR METERS AND ODOMETER	230
(VSS) VEHICLE SPEED SIGNAL	236

SECTION 3.6 CONNECTOR PINOUTS AND END VIEWS

AMBIENT AIR TEMPERATURE SENSOR CONNECTOR (398)	1
ATA DIAGNOSTIC & PROGRAMMING CONNECTOR (384)	1
ATA NEGATIVE BUS, BLUE CONNECTOR (428)	1
ATA POSITIVE BUS, RED CONNECTOR (427)	1
12 WAY HARNESS CONNECTOR (435)	1
AUTOMATIC TRANSMISSION IN-LINE CONNECTOR (389)	2
AUTOMATIC TRANSMISSION IN-LINE CONNECTOR (402)	2
AUTOMATIC TRANSMISSION MODULATOR CONNECTOR (404)	2
AUTOMATIC TRANSMISSION MODULATOR SHIFT RELAY CONNECTOR (403)	2
BODY BUILDER REMOTE PTO CONNECTOR (429)	3
BRAKE LIGHT SWITCH, HYDRAULIC CONNECTOR (51)	4
BRAKE LIGHT SWITCH CONNECTOR (46)	4
BRAKE LIGHT SWITCH AIR CONNECTOR (70)	4
BRAKE LIGHT SWITCH AIR CONNECTOR (71)	4
BRAKE SWITCH RELAY CONNECTOR (393)	5
BRAKE SWITCH HYDRAULIC CONNECTOR (50)	5
BRAKE WARNING MONITOR HYDRAULIC CONNECTOR (49)	5
BLOCKING DIODE ASSEMBLY (47)	5
COOLANT HARNESS CONNECTOR (400)	6
COOLANT LEVEL MODULE CONNECTOR (414)	6
CRANK/START RELAY CONNECTOR (387)	6
CRANK RELAY CONNECTOR (385)	6
CRUISE RESISTOR BLOCK PRINTED CIRCUIT BOARD CONNECTOR (390)	7
CRUISE ON/OFF SWITCH (391)	7
CRUISE SET/RESUME SWITCH (392)	7
CRUISE/PTO/THROTTLE CONNECTOR (394)	7
DASH CONNECTOR, 31 PIN (THRU DASH) (3 & 3A)	8
DASH CONNECTOR (2) THRU DASH 4600/4600 LP TRUCK	9
DASH CONNECTOR (2) THRU DASH 3600, 4000 FBC TRUCK	10
DASH CONNECTOR (2) THRU DASH W/TRUCK	11
DASH CONNECTOR (2) THRU DASH W/FBC	12
DASH CONNECTOR ENGINE (2A)	13
DASH CONNECTOR FRONT END (2B)	13
ECM & IDM POWER RELAY FUSE IN-LINE CONNECTOR (412)	14
ECM CONNECTOR (379)	14
ECM DIODE ASSEMBLY CONNECTOR (415)	14
ECM POWER RELAY CONNECTOR (395)	14
ENGINE HARNESS POWER AND GROUND CONNECTOR (424)	15
ENGINE HARNESS POWER AND GROUND CONNECTOR (426)	15
FUEL FILTER IN-LINE CONNECTOR (399)	16
FUEL FILTER IN-LINE CONNECTOR (401)	16

SECTION 3 ELECTRONIC CONTROL SYSTEM DIAGNOSTICS

III

INDEX

	PAGE
SECTION 3.6 CONNECTOR PINOUTS AND END VIEWS (Continued)	
INJECTOR DRIVE MODULE (IDM) CONNECTOR (380)	17
INJECTOR DRIVE MODULE (IDM) POWER RELAY CONNECTOR (396)	17
INSTRUMENT CLUSTER YELLOW CONNECTOR (26)	18
INSTRUMENT CLUSTER GREEN CONNECTOR (27)	18
KEY SWITCH, TRUCK CONNECTOR (24)	19
KEY SWITCH, FBC CONNECTOR (63)	19
MAP MODULE CONNECTOR (397)	19
SPEEDOMETER SENSOR CONNECTOR (303)	20
TWO SPEED AXLE CONNECTOR (14)	20
VPM CONNECTOR (381)	20