

SECTION 6 CONNECTOR AND HARNESS REPAIR I

INDEX

	PAGE
CONNECTOR AND HARNESS REPAIR	
CONNECTOR REPAIR	1
DEUTSCH HEAVY-DUTY CONNECTORS	1
CONTACT REMOVAL	2
CONTACT AND WIRE ASSEMBLY	3
CONTACT INSERTION	3
INSPECTION	6
STANDARD TERMINAL REPLACEMENT	6
TERMINAL REPLACEMENT — SEALED WEATHER PACK AND METRI-PACK	7
SPLICE CLIP INSTALLATION	7
CRIMP AND SEAL SPLICE SLEEVE INSTALLATION	8
LOCKING WEDGE CONNECTORS	9
TO REMOVE THE TERMINAL FROM THE CONNECTOR:	9
TO REPLACE THE TERMINAL:	9
TO INSTALL THE TERMINAL IN THE CONNECTOR:	10
PACKARD CONNECTORS	11
TO REMOVE THE TERMINAL FROM THE PACKARD CONNECTOR:	11
TO REPLACE THE TERMINAL IN THE CONNECTOR:	12
TO INSTALL THE TERMINAL IN THE CONNECTOR:	12