

SECTION 7

VEHICLE AND COMPONENT ILLUSTRATIONS

I

INDEX

	PAGE
VEHICLE AND COMPONENT ILLUSTRATIONS	
TRUCK LH CAB WIRING	1
RH TRUCK CAB WIRING	2
CENTER TRUCK CAB WIRING	3
TRUCK FUSE PANEL AND EST CONNECTOR (384) INSTALLATION	4
TRUCK BNO/BNC AIR BRAKE PRESSURE SWITCHES	5
TRUCK BNO/BNC HYDRAULIC BRAKE SWITCHES	6
ECM/VPM MODULE LOCATION	7
ECM/VPM MODULE ASSEMBLY	8
TRUCK CRUISE/PTO WIRING	9
REAR CAB PTO WIRING (N/TRAVELCREW CAB)	10
REAR TRAVEL CREW CAB PTO WIRING	11
FBC LH CAB WIRING	12
FBC CAB WIRING WITH AIR BRAKES	13
FBC CAB WIRING WITH HYDRAULIC BRAKES	14
FBC RH CAB WIRING	15
FBC PARK BRAKE SWITCH	16
17FBC FUSE PANEL	17
FBC LEFT KICK PANEL	18
DASH HARNESS WIRING TRUCK AND FBC (LEFT SIDE)	19
DASH HARNESS WIRING TRUCK AND FBC (CENTER)	20
DASH HARNESS WIRING TRUCK AND FBC (LEFT SIDE)	21
ENGINE WIRING - TRUCK AND FBC	22
ENGINE WIRING AT TRANSMISSION - TRUCK AND FBC	25
ENGINE WIRING AT STARTER MOTOR - TRUCK AND FBC	26
ENGINE WIRING ALTERNATORS - TRUCK AND FBC	27
ENGINE WIRING AT AIR/FREON COMPRESSOR - TRUCK AND FBC	28
ENGINE WIRING HYDRAULIC BRAKE/DASH/ENGINE HARNESS - TRUCK AND FBC	29
ENGINE WIRING 105/160 AMP ALTERNATORS - TRUCK AND FBC	30
ENG.-WRNG-(TRK.W/ LEECE-NEV. 2600JA 12V/160A ALTERNATOR W/4 GAUGE PROTECTION)	31
ENGINE WIRING BATTERY CABLE/STARTING HARNESS - TRUCK AND FBC	32
ENGINE WIRING EXHAUST BACK PRESSURE/GLOW PLUG RELAY - TRUCK AND FBC	33
ENGINE WIRING COOLANT LEVEL SENSOR - TRUCK AND FBC	34
ENGINE WIRING ALLISON AT TRANSMISSION WIRING - TRUCK AND FBC	35
ENGINE WIRING - TRUCK AND FBC	36
PLATFORM HARNESS WIRING	37
EST (DATA LINK)/VPM CONNECTIONS/ACCELERATOR PEDAL/STOP LIGHT SWITCH WIRING	39
PARK BRAKE SWITCH INSTALLATION & ADJUSTMENT	40
PLATFORM HARNESS WIRING – FUSE PANEL/BRAKE SWITCH INSTALLATION & ADJUSTMENT	41
PLATFORM HARNESS – CRUISE CONTROL WIRING	42
DASH HARNESS WIRING – ECM/VPM/IDM MODULE WITH 1652SC	43
DASH HARNESS WIRING – VPM/ECM/IDM MODULE INSTALLATION WITH 1652SC	44
DASH HARNESS WIRING – LEFT SIDE WITH 1652SC PLATFORM	45
DASH HARNESS WIRING – RIGHT SIDE WITH 1652SC	46
ENGINE HARNESS WIRING AT DASH PANEL WITH 1652SC	47
LEFT SIDE ENGINE WIRE HARNESS	48

SECTION 7 VEHICLE AND COMPONENT ILLUSTRATIONS

INDEX

	PAGE
VEHICLE AND COMPONENT ILLUSTRATIONS	
RIGHT SIDE ENGINE WIRING WITH 1652SC	49
ENGINE HARNESS WIRING AT TRANSMISSION	50
ENGINE HARNESS WIRING	51
ENGINE WIRING AT ALTERNATOR	52
BATTERY CONNECTOR (426) AND TOP VIEW OF AC COMPRESSOR	53
ALLISON "AT" TRANSMISSION WIRING	54
ENGINE WARM-UP DEVICE	55
ENGINE SHUTDOWN WIRING AT DASH PANEL	56
ENGINE SHUTDOWN WIRING AT DASH PANEL (CONTINUED)	57